

[Back To Article](#)


HVAC

Heating and Ventilation


HEATER CORE LHD AWD

REMOVAL

1. Drain the cooling system. Refer to [Cooling System Draining, Filling and Bleeding](#) .
2. Remove the instrument panel passenger side reinforcement. Refer to [Instrument Panel Passenger Side Reinforcement](#) .
3. Remove the heater core upper and lower pipes.
 - Position a container to collect the fluid.
 - Loosen the 4 screws and remove the clips.
 - Remove and discard the 4 O-ring seals.

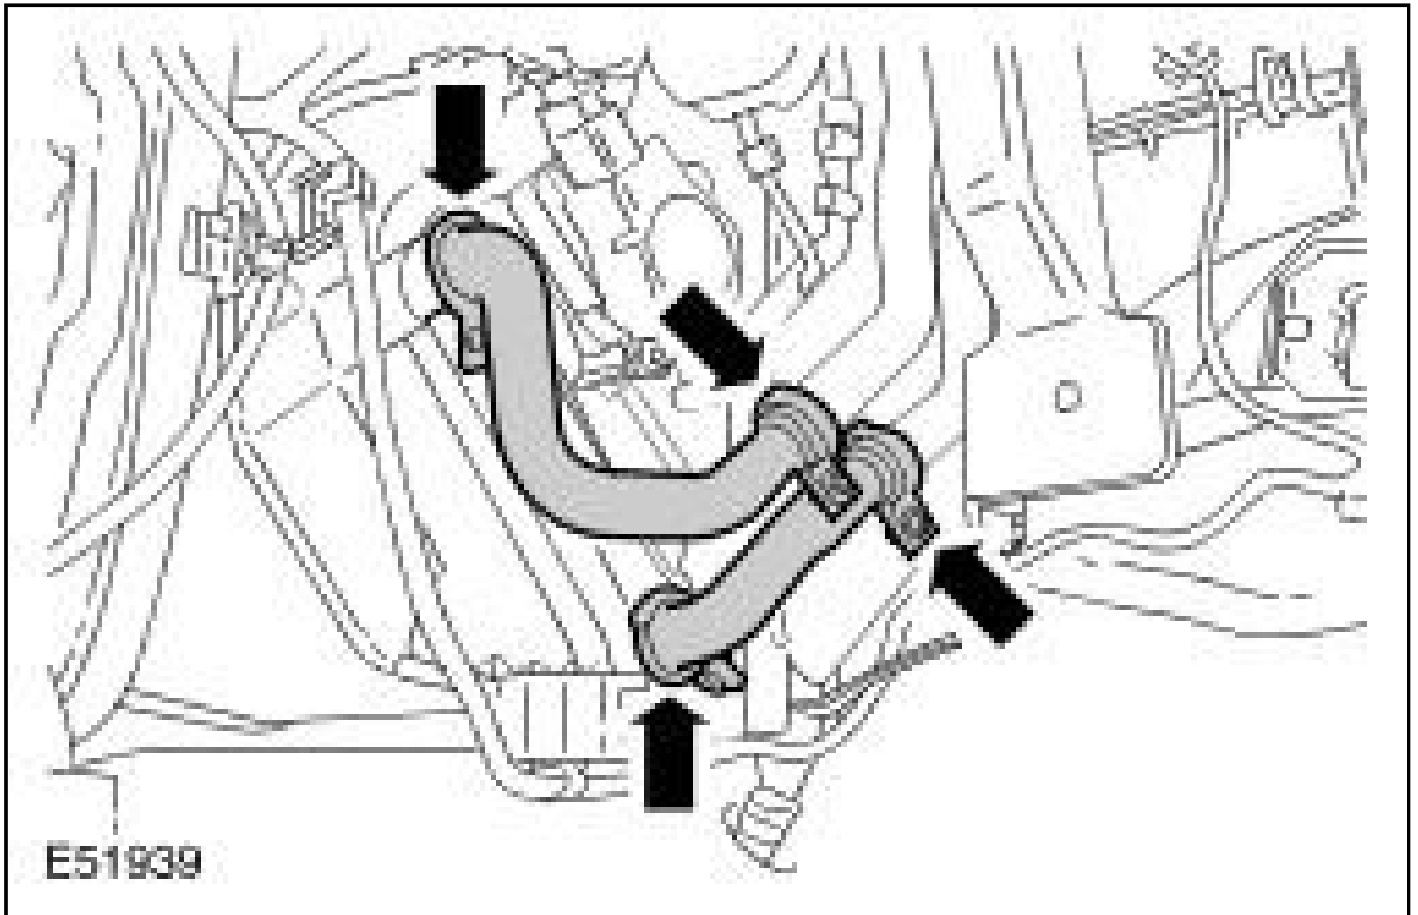

4. Remove the heater core.

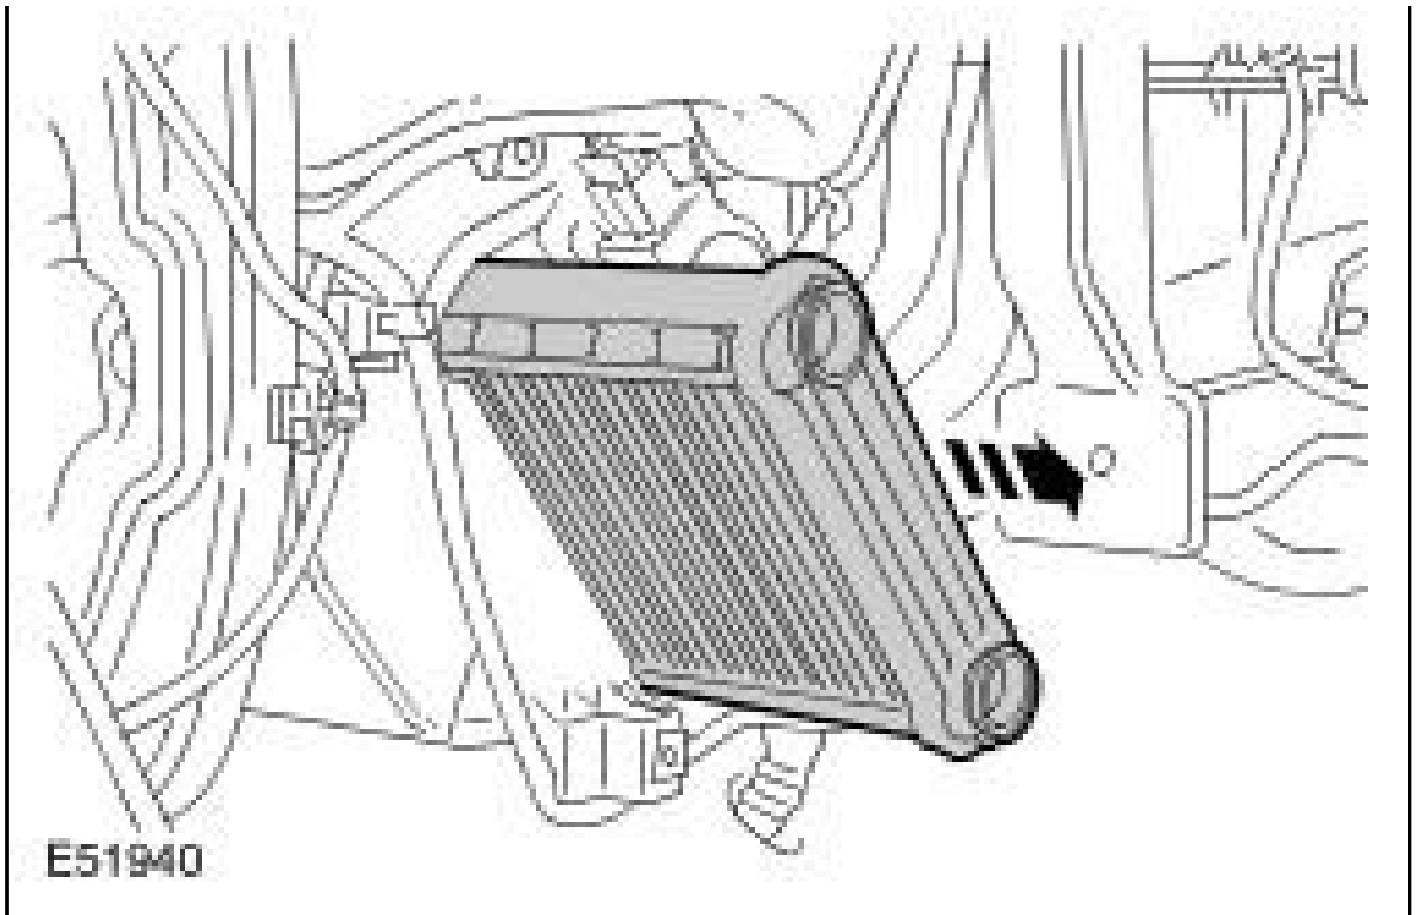


INSTALLATION

1. Install the heater core.
2. Install the heater core upper and lower pipes.
 - Clean the components.
 - Install the new O-ring seals.
 - Install the clips and tighten the screws.
 - Remove the container.
3. Install the instrument panel passenger side reinforcement. Refer to [Instrument Panel Passenger Side Reinforcement](#).
4. Refill the cooling system. Refer to [Cooling System Draining, Filling and Bleeding](#).


HEATER CORE RHD AWD

REMOVAL


1. Drain the cooling system. Refer to [Cooling System Draining, Filling and Bleeding](#).
2. Remove the instrument panel driver side reinforcement. Refer to [Instrument Panel Driver Side Reinforcement](#).
3. Remove the driver side footwell duct.
 - Remove the 2 Torx screws.

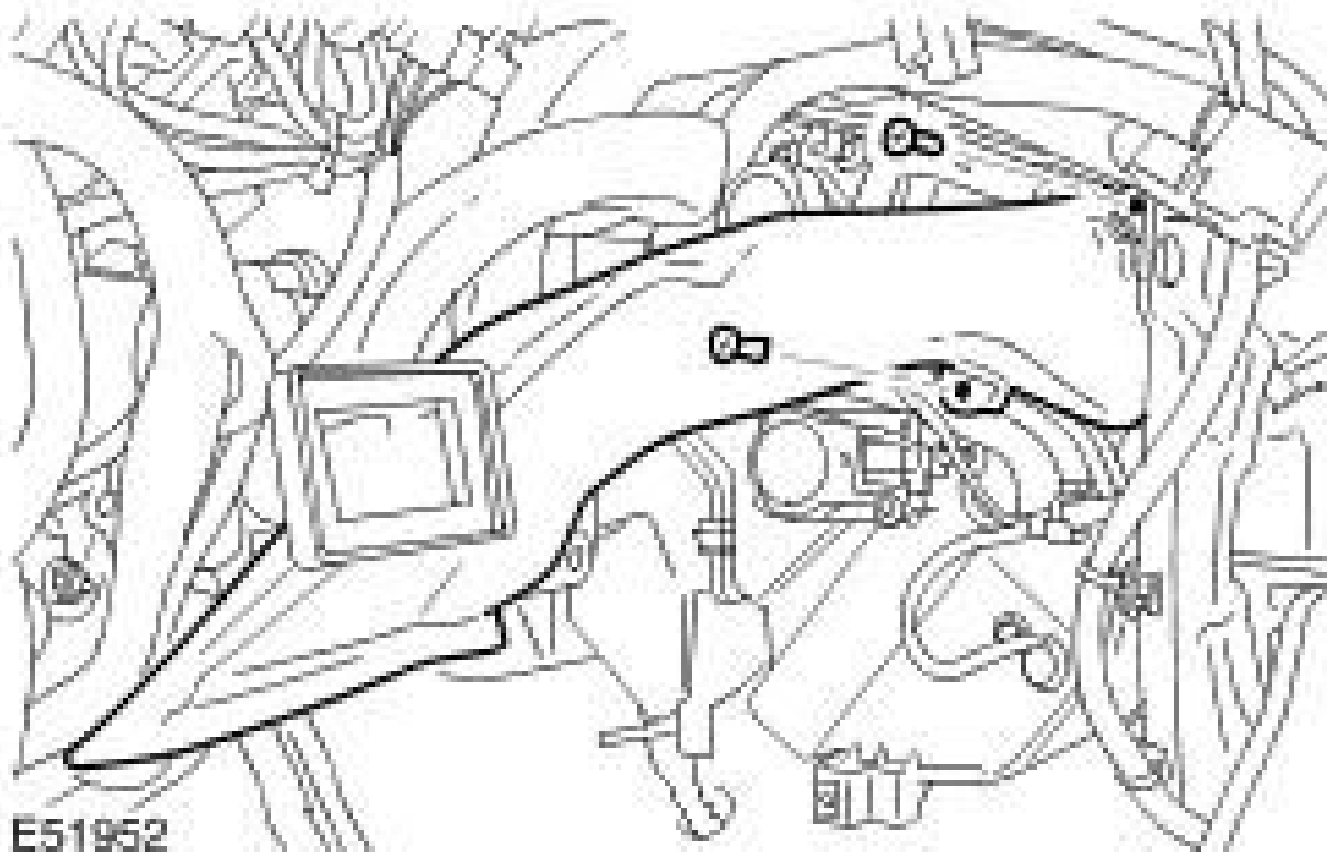

4. Remove the heater core upper and lower pipes.
- Position a container to collect the fluid.
 - Loosen the 4 screws and remove the clips.
 - Remove and discard the 4 O-ring seals.

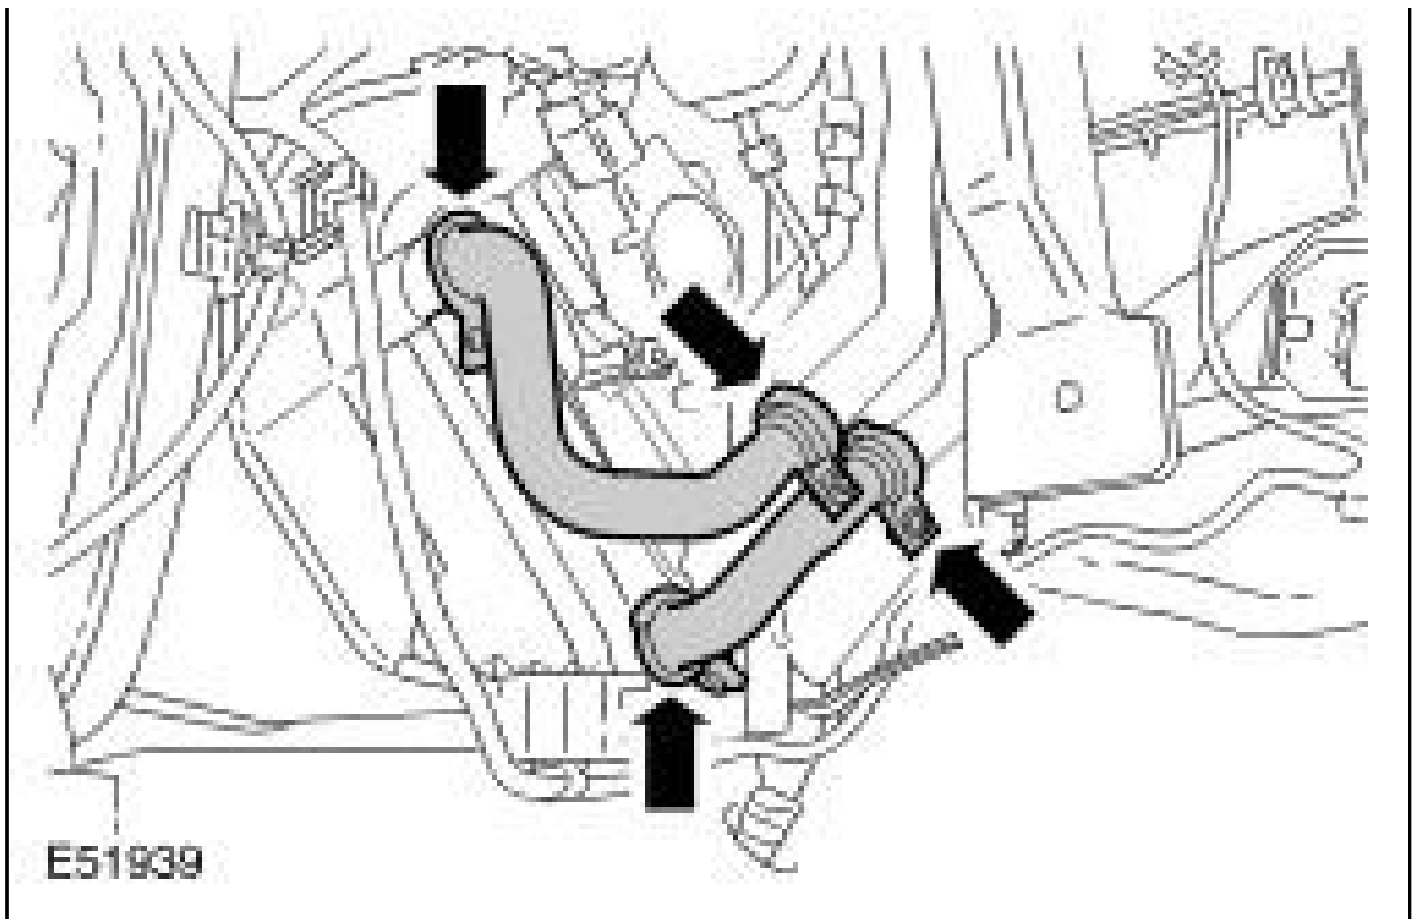

5. Remove the heater core.

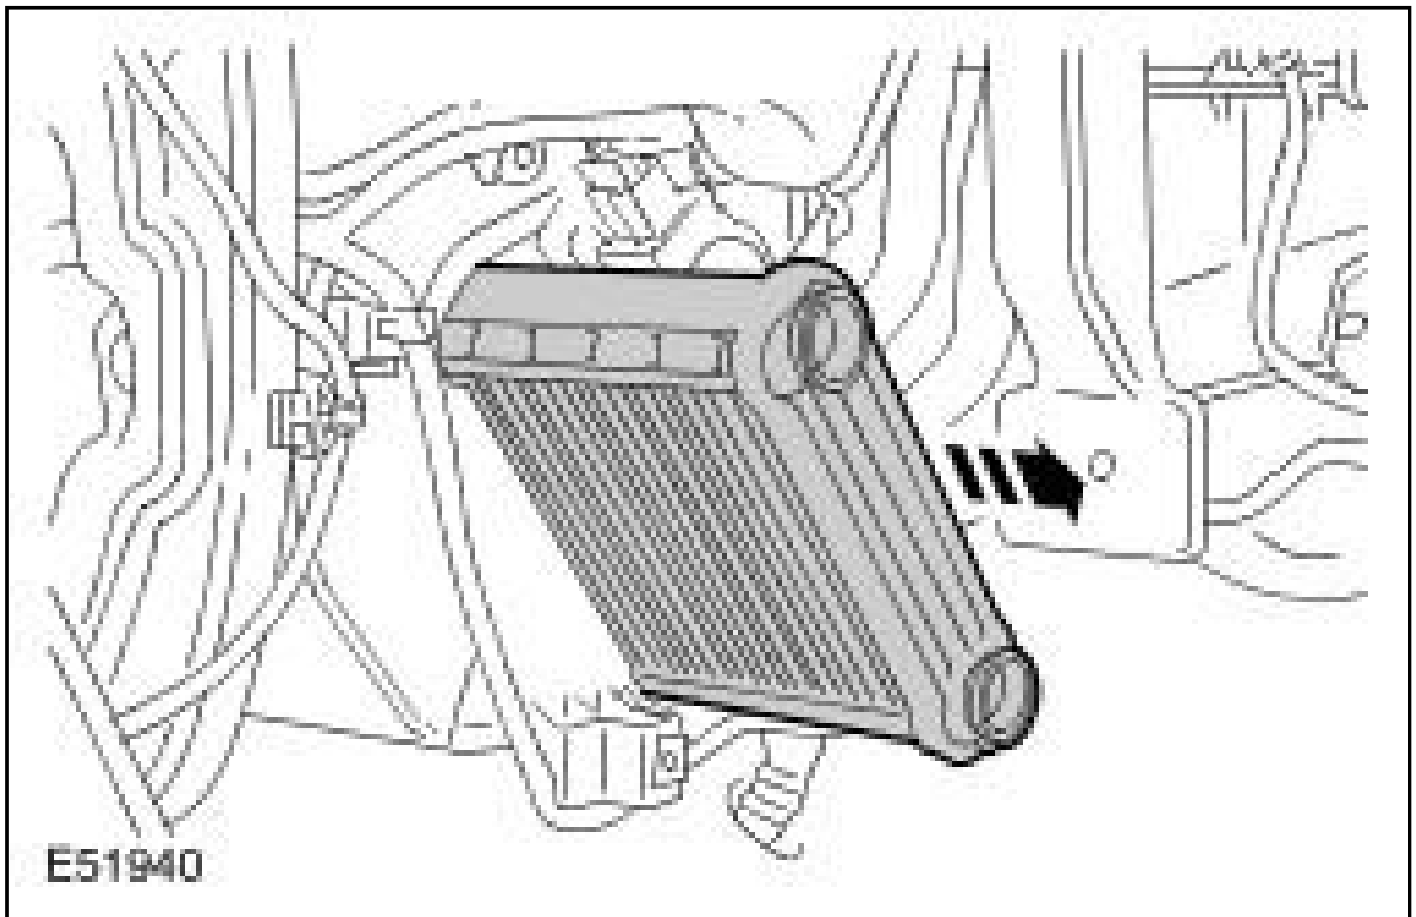

INSTALLATION

1. Install the heater core.
2. Install the heater core upper and lower pipes.
 - Clean the components.
 - Install the new O-ring seals.
 - Install the clips and tighten the screws.
 - Remove the container.
3. Install the driver side footwell duct.
 - Tighten the screws.
4. Install the instrument panel driver side reinforcement. Refer to [**Instrument Panel Driver Side Reinforcement**](#) .
5. Refill the cooling system. Refer to [**Cooling System Draining, Filling and Bleeding**](#) .

Copyright 2021 Mitchell Repair Information Company, LLC. All Rights Reserved.

Article GUID: A00525466