



Liftgate Window Glass Trim Panel (76.43.75)

Removal


- 1 . Disconnect the battery ground cable.
For additional information, refer to
- 2 . Remove the license plate lamp.
 - Release the clip.
 - Disconnect the electrical connector.
 - Repeat the above procedure for the other lamp.

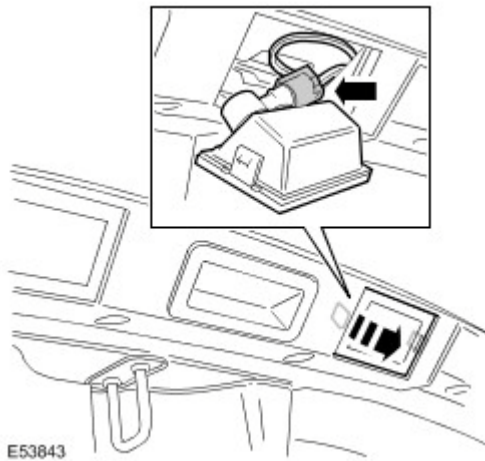


- 3 . Remove the liftgate glass release switch.
 - Release the 2 clips.
 - Disconnect the electrical connector.

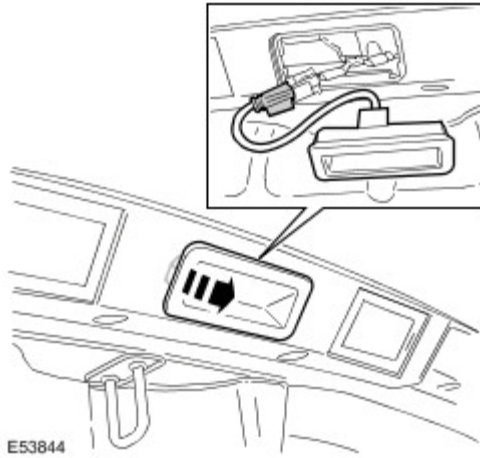

- 4 . Remove the liftgate outer lower trim panel.
- Remove the 8 Torx screws.

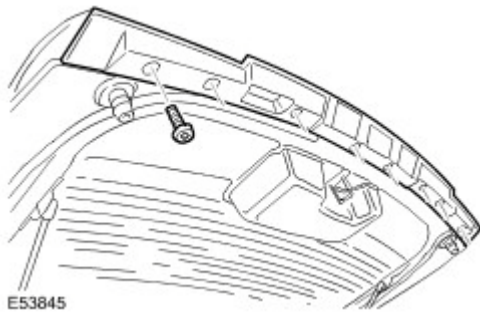

- 5 . Remove the liftgate glass outer trim stiffener and backing panel.
- Remove the 15 nuts.
 - Release the 2 wiring harness clips.

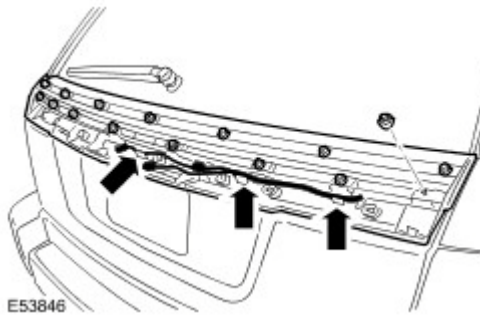

Installation

- 1 . Install the liftgate glass outer trim stiffner and backing panel.
 - Tighten the nuts to 10 Nm (7 lb.ft).
- 2 . Install the liftgate glass outer lower trim panel.
 - Tighten the Torx screws.
- 3 . Install the liftgate glase release switch.
 - Connect and secure the electrical connector.
 - Carefully secure the clips.
- 4 . Install the license plate lamp.
 - Connect and secure the electrical connector.
 - Carefully secure the clips.
 - Repeat the above procedure for the other lamp.
- 5 . Connect the battery ground cable.

For additional information, refer to